
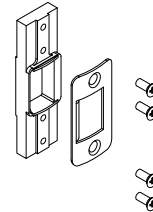



USE THIS PREP WHEN FULLY MORTISING THE STRIKE PLATE

1. PREPARE THE DOOR STILE AS SHOWN.
2. INSTALL BACK BOX (NOTE IT IS ESSENTIAL THIS COMPONENT IS FITTED IN ORDER TO COMPLY WITH BS EN 179) SECURELY FASTEN USING M5 SCREWS SUPPLIED.
3. APPLY STRIKE PLATE TO BACK BOX AND SECURELY FASTEN.

IMPORTANT!  
ONLY STRIKES FROM THE ADAMS RITE 8460 OR 7100 RANGES CAN BE USED IN ORDER TO COMPLY WITH BS EN 179 AND BS EN 1125.  
PLEASE NOTE THIS STRIKE IS NOT SUITABLE FOR USE WITH THE 4900 SERIES DEADLATCH AND DOES NOT CONFORM TO THE REQUIREMENTS OF BS EN 1125.

DRILL & CSK TO SUIT M5  
IN 2 PLACES

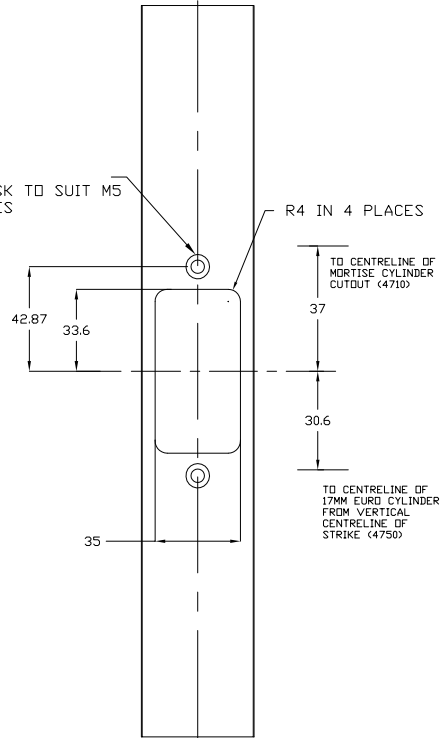

ADAMS RITE EUROPE LIMITED  
MORETON INDUSTRIAL ESTATE, LONDON ROAD, SWANLEY.  
KENT. BR8 8TZ +44(0)1322 668024



CERTIFICATE OF CONFORMITY No. 1211-CPD-AB0012


8460-07-628 RADIUS STRIKE FOR REBATED DOORS

USE THIS PREP WHEN MORTISING THE BACK BOX ONLY

1. PREPARE THE DOOR STILE AS SHOWN.
2. INSTALL BACK BOX (NOTE IT IS ESSENTIAL THIS COMPONENT IS FITTED IN ORDER TO COMPLY WITH BS EN 179) SECURELY FASTEN USING M5 SCREWS SUPPLIED.
3. APPLY STRIKE PLATE TO BACK BOX AND SECURELY FASTEN.

**IMPORTANT!**  
 ONLY STRIKES FROM THE ADAMS RITE 8460 OR 7100 RANGES CAN BE USED IN ORDER TO COMPLY WITH BS EN 179 AND BS EN 1125.  
 PLEASE NOTE THIS STRIKE IS NOT SUITABLE FOR USE WITH THE 4900 SERIES DEADLATCH AND DOES NOT CONFORM TO THE REQUIREMENTS OF BS EN 1125.



TO CENTRELINE OF  
MORTISE CYLINDER  
CUTOUT (4710)

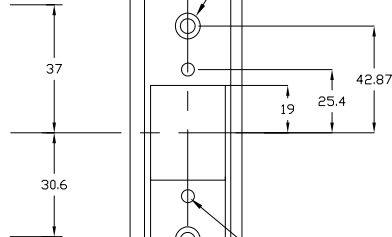

DRILL & CSK TO SUIT M5  
IN 2 PLACES

TO CENTRELINE OF  
17MM EURO CYLINDER  
FROM VERTICAL  
CENTRELINE OF  
STRIKE (4750)

DRILL CLEARANCE HOLE  
TO SUIT M5 IN 2 PLACES

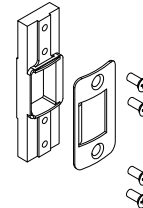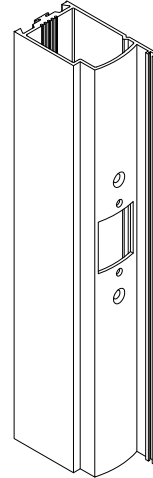

ADAMS RITE EUROPE LIMITED  
 MORETON INDUSTRIAL ESTATE, LONDON ROAD, SWANLEY.  
 KENT. BR8 8TZ +44(0)1322 668024



CERTIFICATE OF CONFORMITY No. 1211-CPD-AB0012

8460-07-628 RADIUS STRIKE FOR REBATED DOORS